

# AC digital multi-function meter

**Product type: PZEM-061**

## **A. Function**

1. Electrical parameter measurement function (voltage, current, active power, energy)
2. Overload alarm function (over power alarm threshold, backlight and power flashing to alarm).
3. Power alarm threshold preset function (can set power alarm threshold).
4. The reset function of energy key.
5. Store data when power off.
6. Large-screen LCD (display voltage, current, active power, energy at the same time)
7. Backlight function.

## **B. Appearance and Key function**

### **I. Display Interface**

Display interface is a large-screen LCD, it can display voltage, current, power, energy parameters at the same time.

### **II. Display format**

1. Power: test range: 0~22kW  
Within 1kW, the display format is 0.0~999.9W;  
Within 1kW~10kW, the display format is 1000~9999W;  
10kW and above, the display format is 0.1~22.0kW.
2. Energy: test range: 0~9999kWh  
Within 10KWh, the display format is 0~9999Wh;  
10kWh and above, the display format is 10~9999kWh.
3. Voltage: test range: 80~260V  
Display format: 80~260V
4. Current: test range: 0~100A  
Display format: 0.00~99.99A

### **III. Key**

#### **1. Backlight control**

Short press the key to turn on or off the backlight, the backlight has memory function, it can store the on or off state when power off.

#### **2. Reset energy**

Step1: Long press the key for 5 seconds until the number in energy display window flash, then release the key.

Step2: Short press the key again, then the energy value is cleared and exit the reset flashing state. If you don't want to clear, then long press the key for 5 seconds again until the number doesn't flash, it means the energy value is not cleared and will exit the reset state.

#### **3. Set power alarm threshold**

Step1: Long press the key until the LCD screen display "SET CLR", then release the key to enter the setting state



Step2: Power window display the current power alarm value and the last digit begin to flash, then you can short press to plus 1, when there is no operation over 3 seconds, it will switch the digit position automatically, the setting method is as same as the above.

Step3: After finish the setting, long press the key over 5 seconds will store automatically and exit, the range of active power threshold is 0.0~22.0kW


**C. Precautions**

1. This module is suitable for indoor, please do not use outdoor.
2. Applied load should not exceed the rated power.
3. Wiring order can't be wrong.

**D. Specification parameters**

1. Working voltage: 80 ~ 260VAC
2. Test voltage: 80 ~ 260VAC
3. Rated power: 100A/22000W
4. Operating frequency: 45-65Hz
5. Measurement accuracy: 1.0 grade

**E Wiring diagram**

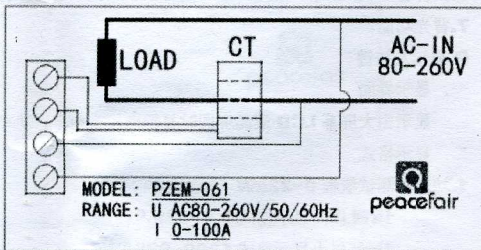

**F. dimension diagram(mm)**

