


UT345C Gas Tank Level Checker User Manual

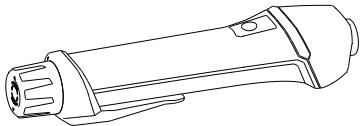

Introduction

UT345C is a portable gas tank level checker adopting ultrasonic detection technology. This product can quickly determine how much gas is left in the tank by LED indication. It is easy to use, accurate and reliable. It can be used in places and fields such as food processing, campsites or barbecues, gas tank sales, and catering. It has a flashlight, making it ideal for measuring in undesirable lighting conditions.


Accessories

- 1. Gas tank level checker 1 PC
- 2. AAA (LR03) battery 2 PCS
- 3. User manual 1 PC
- 4. Safety instructions 1 PC

Specifications


- Scope of application:
This product is suitable for steel and aluminum cylinders with a diameter of 8 to 14 in (200 to 350mm).
- Battery
AAA (LR03) 1.5V 2PCS
- Environmental requirements
Operating: -15~40°C ≤85%RH
Storage: -20~60°C ≤75%RH

Product Structure

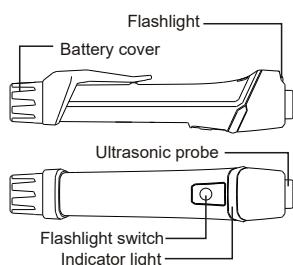

Operation

- Schematic picture:

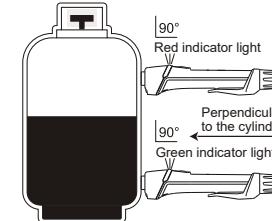

Measurement steps:

1. Press the ultrasonic probe horizontally onto the gas cylinder. The buzzer will beep, and the red and green indicator lights will keep flashing, indicating that the measurement is underway.
2. After pressing the probe for 2 seconds, the buzzer will emit a high-pitched beep, indicating the end of measurement. The indicator light will turn red (no liquid) or green (liquid detected) according to the measurement results.
3. If the probe is pressed and held for a long time, it will keep measuring. In this case, the angle of the probe can be adjusted slightly and the measurement can be repeated to obtain accurate measurement results.
4. If the probe is released, the measurement ends. The indicator light remains on for 5 seconds according to the measurement results. The product will automatically enter standby state after 5 seconds.

EN

UT345C Gas Tank Level Checker User Manual

Indicator light color

Red and green indicator lights keep flashing: Measuring.
Green indicator light: Liquid detected where the probe is pressed onto the gas cylinder.
Red indicator light: No liquid.

Flashlight

1. Press the flashlight switch to turn on/off the flashlight.
2. The flashlight will turn off automatically after being turned on for 10 minutes to save battery power.

Cautions

To ensure the measurement accuracy:

1. A dirty ultrasonic probe can lead to inaccurate measurements, especially when measuring aluminum cylinders. The probe (red rubber) should be cleaned with a wet cloth (without detergent) when it is dirty.
2. Dirty or rusted cylinders can affect measurements and require cleaning or gently sanding the tank for surface contaminants.
3. The product must be held horizontally when measuring. The probe should be 90 degrees perpendicular to the cylinder wall.
4. If the red and green indicator lights keep flashing and no second beep is heard during the measurement, it indicates that the measurement is interfered or the cylinder measured is not in the scope of application. Please change the measurement position.
5. Measurements may also be affected by:
 - If the battery power is low, replace the batteries in time.
 - The measurement position is the curved outer wall at the top or bottom of a cylinder.
 - Cylinder movement causes the gas liquid inside it sloshing.
 - There is an invisible area of rust inside the cylinder.
 - The cylinder surface has a thick coat of paint or sticker.
 - The outer surface of the cylinder freezes.
 - The outer surface of the cylinder has condensation.
 - The cylinder is dented or severely scratched.

Maintenance

- Replace batteries:

When the flashlight or indicator light is dim, it indicates that the batteries are about to run out.
when the dim indicator lights keep flashing and buzzer continues to sound and no result can be measured, it indicates that the battery power has been exhausted.

Please replace them as follows:

1. Unscrew the battery cover counterclockwise;
2. Take out the old batteries and put in two new 1.5V AAA batteries. Be sure that the battery polarity is correct when installing.
3. Install the battery cover and tighten it clockwise until a beep is heard. The batteries are installed.



Clean the housing:

Clean the housing with a damp cloth and do not use corrosive cleaners or solutions, as they can corrode the housing, especially the rubber of the ultrasonic probe.

- Remove the batteries if the product is not used for an extended period of time. If the batteries are not removed, battery leakage can damage the product.
- Do not disassemble this product or alter its internal structure.

Due to different batches, the materials and details of actual products may be slightly different from the graphic information. Please refer to the goods received. The experimental data in the manual are theoretical values and all from Uni-Trend's internal laboratories, for reference only. Customers cannot use them as bases for placing orders. If users have any questions, please contact customer service.

UNI-T®
UNI-TREND TECHNOLOGY (CHINA) CO., LTD.

No. 6, Gong Ye Bei 1st Road,
Songshan Lake National High-Tech Industrial
Development Zone, Dongguan City,
Guangdong Province, China

